



45° MITER CUT

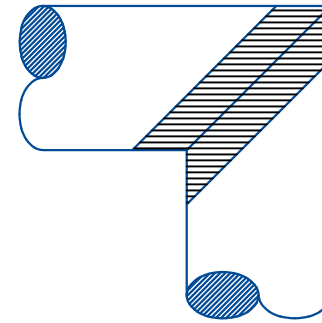


CORNER SECTION

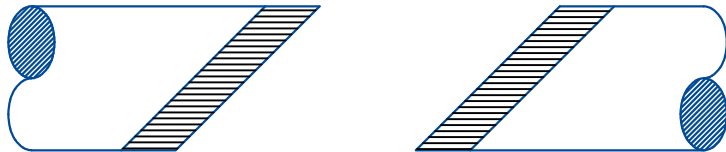


APPLY ADHESIVE

Utilize Jeene Profile Glue To Splice Sectional Lengths Of Inverseal.  
Wabo Part No. 28745

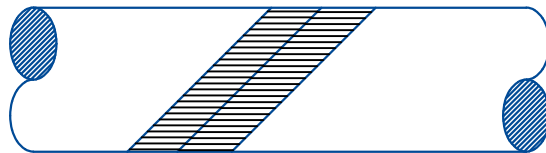

PRESS TOGETHER AND HOLD FOR ONE MINUTE.

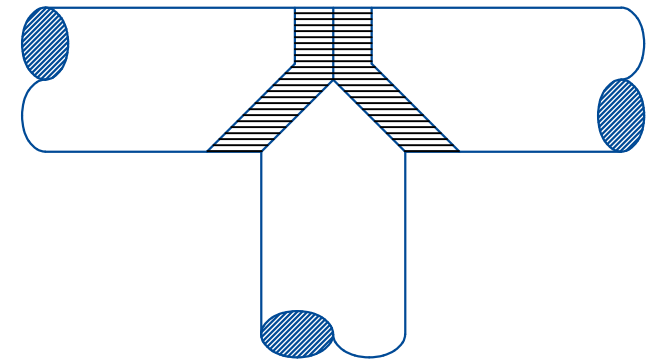

TEE SECTION  
DIRECTIONAL CHANGES

## INVERSEAL PROFILE

### SPLICING INSTRUCTIONS:

Splice One Length Of Wabo Inverseal To The Adjoining Length By Cutting Both Ends On A 45° Miter And Bonding With Jeene Profile Glue Supplied By Manufacturer. Apply The Adhesive To one side, Immediately Align And Press Both Ends Together And Hold For One Minute. Upon Completing Splice It Is Highly Recommended To Let Splice Remain Undisturbed For 1 Hour Before Installation. Use The Same Technique For Changes Of Direction Shown Above.

PROJECT NAME: -

PROJECT LOCATION: -

DRAWING DESCRIPTION:

**Wabo®InverSeal**

DATE: 12/28/20

MODEL: IV



Watson Bowman Acme  
95 Pineview Drive Amherst, NY 14228  
phone: (716) 691-7566 fax: (716) 691-9239  
www.watsonbowmanacme.com

A brand of  
**BCC GROUP**

Information provided herein, including but not limited to, any drawing, design, photograph, graphic, or statement(s) ("Materials") are proprietary and the property of Watson Bowman Acme Corporation ("Company"). Reproduction, translation, or reduction to any electronic medium or machine readable form, in whole or part, is strictly prohibited, except for the express purpose for which it has been furnished, without prior written consent of Company. All Materials contained herein are provided by Company for information purposes only. Company reserves the right to amend or withdraw any information contained in the Materials without notice. All technical or other advice by Company, whether verbal or written, concerning products, or the use of products in specific situations ("Advice") is given by Company and is used at the Users own risk.

REVISION NO:

1

SHEET NO:

5

DRAWING NO:

C-21454