


Installation Procedure

Last Updated: May 2021

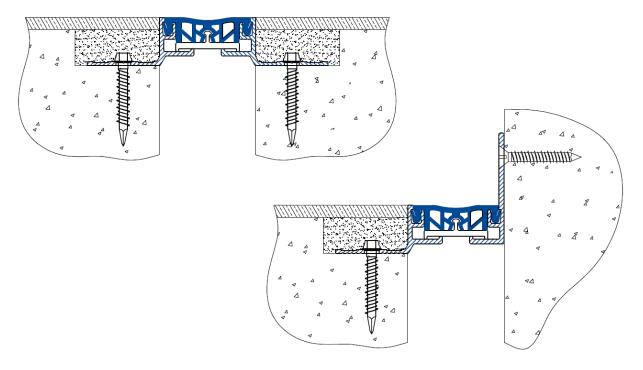

Wabo®CorridorWrap, "CWFF" & "CWFF-C"

Interior Floor Expansion Joint System

The following installation procedure is very important and must be fully understood prior to beginning any work. To ensure proper installation and performance of expansion joint system the following actions must be completed by the installing contractor. Failure to do so will affect product warranty.

- 1) Carefully read and understand installation procedure. Contact WBA's Technical Service Department at (800) 677-4922 for product assistance.
- 2) Inspect all shipments and materials for missing or damaged components and hardware. Contact Customer Service at (800) 677-4922 with WBA's order number and invoice for prompt assistance.
- 3) Inspect substrate or adjacent construction for acceptance before beginning work. Report unacceptable construction to the project manager for scheduled repair work.
- 4) Review WBA shop drawings for project specific detailed information if Engineering services were purchased at time of order.

Information provided herein, including but not limited to, any drawing, design, photograph, graphic, or statement(s) ("Materials") are proprietary and the property of Watson Bowman Acme Corp. ("Company"). Reproduction, translation, or reduction to any electronic medium or machine readable form, in whole or part, is strictly prohibited, except for the express purpose for which it has been furnished, without prior written consent of Company. All Materials contained herein are provided by Company for information purposes only. Company reserves the right to amend or withdraw any information contained in the Materials without notice. All technical or other advice by Company, whether verbal or written, concerning products, or the use of products in specific situations ("Advice") is given by Company and is used at the User's own risk.

Watson Bowman Acme Corp. 95 Pineview Drive Amherst, NY 14228 phone: 716-691-7566 fax: 716-691-9239 wbacorp.com

WBA P/n #20267



Health & Safety

During the installation of any Watson Bowman Acme product, appropriate personal protective items should be worn at all times, including but not limited to the following:

- Proper work clothing
- Safety glasses
- Safety boots
- Gloves
- Hard hat











Local rules and regulations regarding safe work environments and health should be followed.


Product Components

The following components are required for the installation of this product:



1/4" x 1 3/4" Threaded Concrete Anchor P/n: **6523** (Floor Anchor Only)

Components below vary in size depending on model of system:

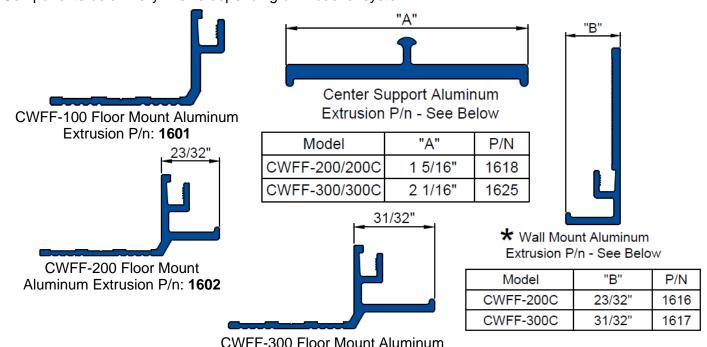


Watson Bowman Acme Corp. 95 Pineview Drive Amherst, NY 14228 phone: 716-691-7566 fax: 716-691-9239 wbacorp.com

WBA P/n #20267

Extrusion P/n: 1603



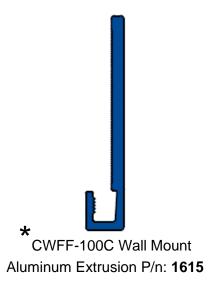




241F Adhesive, P/n: **2716**



PP Primer for 241F Adhesive, P/n: **2717**

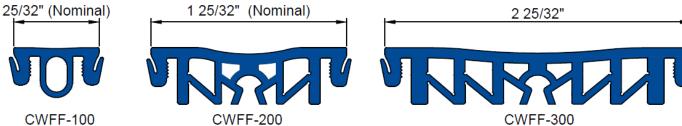

Part Number				
Model	Black Seal	White Seal	Beige Seal	Grey Seal
CWFF-100/100C	17501	17504	17503	17502
CWFF-200/200C	17601	17604	17603	17602
CWFF-300/300C	17701	17704	17703	17702


- Optional components for splice procedures. Place order for required quantities.
- * Components required for corner condition.



Installation


1

Position aluminum extrusions on blockouts as shown. Drill holes for 1/4" diameter concrete anchor. Maintain alignment of extrusion adjacent to opening as shown.

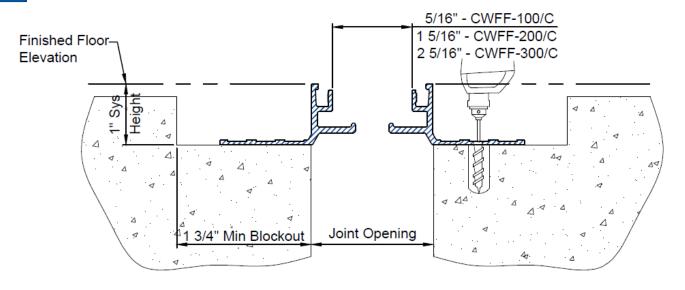

2

Secure extrusions to slab by following manufacturer's recommendations for proper anchor installation of concrete anchors spaced at 24" O.C.

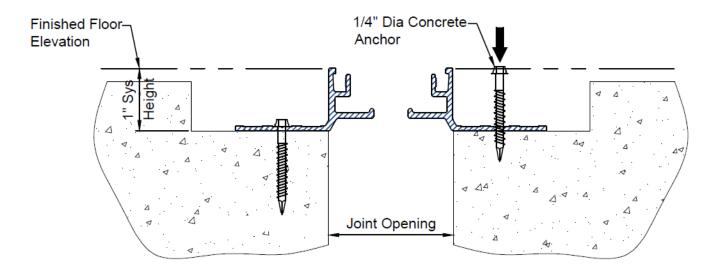







For installation of Wall Mount Aluminum Extrusion, utilize a suitable anchor (By Others) spaced at 24" Max. O.C. based upon the wall construction.

Note: Wall Mount Extrusion is not pre-drilled by the manufacturer.

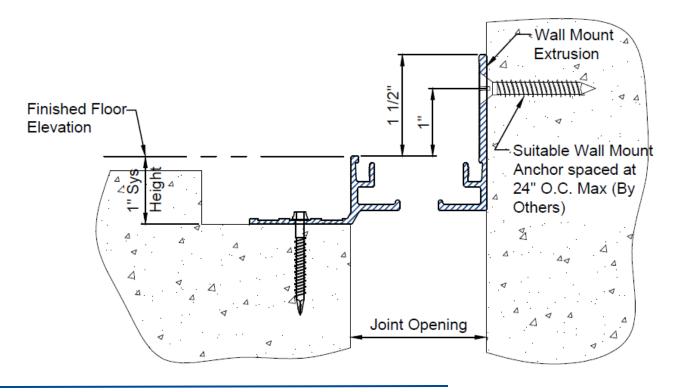

3

(CWFF-200/C and CWFF-300/C Conditions Only)
Snap on Elastomeric Seal to the Center Support Plate before installation into the Base and/or Wall Mount extrusions.

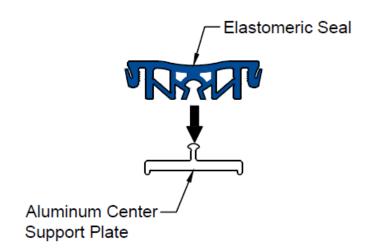

Watson Bowman Acme Corp. 95 Pineview Drive Amherst, NY 14228 phone: 716-691-7566 fax: 716-691-9239 wbacorp.com

WBA P/n #20267




4

(CWFF-200/C and CWFF-300/C Conditions Only)

Insert Elastomeric Seal/Support Plate Assembly into the slots of the Aluminum Base Extrusion, exercising care not to damage Elastomeric Seal.


Note: If Possible, please stagger the splices on the support plate and base members by at least 12".

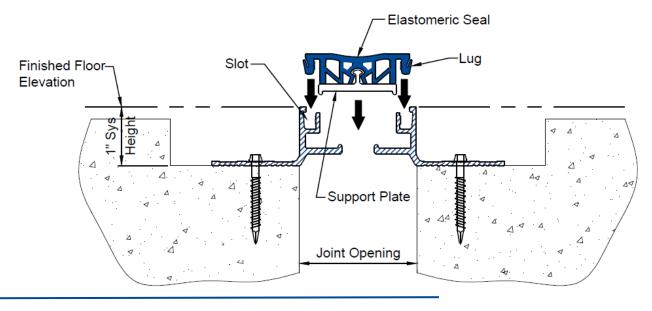

Following Manufacturer's recommendations, install non-shrink grout into blockout.

Note: Protect surfaces during placement of blockout infill.


<u>Note</u>: Protect expansion joint finish during installation of non-shrink grout and finish flooring materials. Also, if possible, keep the protection cover over the expansion joint system during construction activities.

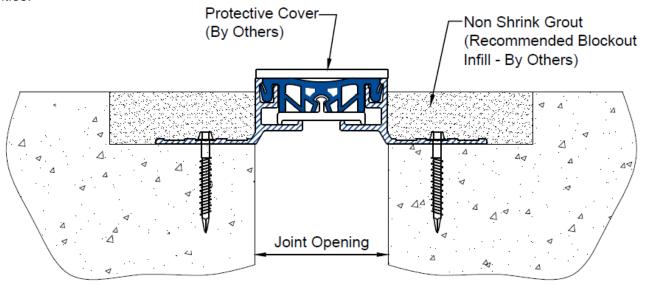



Following manufacturer's installation procedures, install finish flooring materials. Ensure flush installation with top of expansion joint system.

<u>Note</u>: Protect expansion joint finish during installation of non-shrink grout and finish flooring materials. Also, if possible, keep the protection cover over the expansion joint system during construction activities.

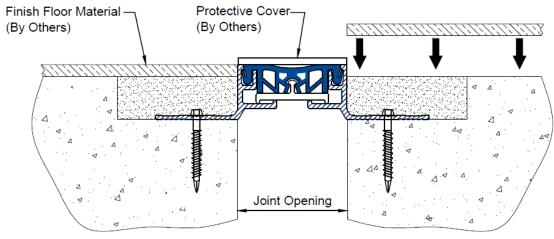


Suggested Field Splice Procedure

- 1. Cut ends of seal with a sharp knife and miter box to the desired angle. Ensure that cuts are clean and straight.
- 2. Clean ends of seal with a solvent.
- 3. Brush apply PP Primer to both seal ends to be joined.
- 4. Apply 241F Adhesive to one of the two seal ends to be bonded.
- 5. Apply pressure, bringing the two surfaces into tight contact immediately after adhesive is applied. Hold in place for one to two minutes for initial bond.
- 6. Re-check quality of all splices/miters and apply adhesive as required.
- 7. It is usually recommended to allow 15 minutes prior to installing seal. To achieve proper working strength, care shall be exercised since it takes 24 hours for adhesive to fully cure.



241F Adhesive

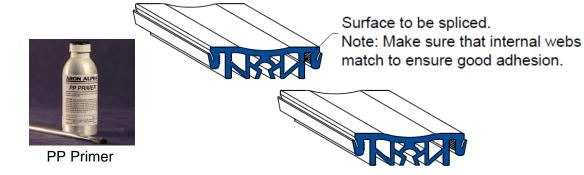

Watson Bowman Acme Corp. 95 Pineview Drive Amherst, NY 14228 phone: 716-691-7566 fax: 716-691-9239 wbacorp.com



Follow us on social media for industry news, new product announcements & more:









Watson Bowman Acme Corp. 95 Pineview Drive Amherst, NY 14228 phone: 716-691-7566 fax: 716-691-9239 wbacorp.com

WBA P/n #20267